 





 
 


 

 











How to use the washing machine

To remove any residual water used in testing by the manufacturer, we recommend that you carry out a short wash cycle without laundry. Open the tap. Close the door. Pour a small amount of detergent (about 30 ml)  into the detergent dispenser. Select a short wash programme (see programme chart). Press the "Start/On Off" button  (depends on model).

Sort the laundry	Sort the laundry according to: Fabric type / care label symbol Cottons, mixed fibres, easy care/synthetics, wool, handwashed items. Colours Separate coloured and white articles. Wash new coloured articles separately. Size Wash items of different sizes in the same load to improve washing efficiency and distribution in the drum. Delicates Wash delicates separately: Use a special programme for Wool  , curtains and other delicates. Always remove curtain glides or wash curtains with the glides inside a cotton bag. Use the special program for handwash fabrics. Wash small articles (e.g. nylon stockings, belts etc.) and articles with hooks (e.g. bras) in special cotton bags for washing machines or in zipped pillow cases.
Prepare the laundry	Empty all pockets Coins, safety pins and similar items can damage your laundry and the appliance drum. Closures Close zips and hooks and eyes; loose belts or ribbons should be tied together. Stain removal Blood, milk, egg etc. are generally removed by the enzyme phase of the programme. To remove red wine, coffee, tea, grass and fruit stains etc. add a stain removing agent in detergent dispenser  or chlorine bleach in compartment  (depending on model). Particularly stubborn stains can be treated with stain remover before the wash. Dyeing and Bleaching Commercially available products usually consist of a dye colour, fixing agent and salt. Pour the dye colour, the fixing agent and then the salt directly into the empty drum. Load the laundry only afterwards. Use exclusively dyes and bleaches recommended for washing machines. Follow the Manufacturer's instructions. Plastic and rubber components of the machine can be stained by dyes. Make sure that all zips are closed and pockets are empty. Make sure there are no cigarette lighters among the items. Turn the items of clothing inside out.
Open the door	To open the door press the button inside the handle and pull. If the child lock is active, deactivate it.
Load the laundry and close the door.	For optimal washing results, place items loosely into the washing machine. Close the door.
Choose and measure out the detergent and additives	The type of detergent depends on: The type of fabric (cottons, synthetics, delicates, wool - when washing woollens remember to use a detergent suitable for woollens), the colour, the washing temperature, the degree and type of soiling. Dosage Follow the dosage recommendations on the detergent pack. For the water hardness in your area, you can request information from the water company. Soft water requires less detergent than hard water (refer to the water hardness table in the operating instructions).
Switch on the washing machine and select the programme	To switch on the washing machine, press the "On/Off" button. To select the programme, turn the knob. The corresponding symbol will appear on the display. To change the programme once the wash cycle has started, turn the knob to "○" and set the new programme.
Select the desired special options	Select an option by pressing the corresponding button. Press the button again to cancel the option. Selecting any option the indication lights up. When the combination of programme, additional options and temperature is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.
Switch on the appliance	Open the tap and press the "Start" button. The current stage of the programme is shown on the display.
Programme end – Unload the laundry	The Start button switches off at the end of the wash cycle. Check functions.
Switch off the appliance	Turn the knob to "○". Turn off the tap. Open the door and unload the machine. Leave the door ajar to allow the drum to dry out.

Programme table				Detergent and additives				Options						
Programme		Care Labels	Type of wash	Load kg	Fabric-Softener	Main Wash	Prewash	Start Delay	Prewash	Intensive Rinse	Rinse Hold	Spin	Quick-wash	Max. Speed Spin
Cotton	 90°, 75°, 60°, 40°, 30°	 	Averagely to lightly soiled cottons, bed linen, table linen, underwear, towels, shirts, etc. <i>For heavily soiled loads the "Prewash" option can also be selected.</i>	5,0	*	Yes	*	*	*	*	*	*	*	1000
Synthetic	 60°, 50°, 40°, 30°	 	Slightly to normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton. <i>For heavily soiled loads the "Prewash" option can also be selected.</i>	2,5	*	Yes	*	*	*	*	*	*	*	800
Delicate	 40°, 30°		Curtains and delicate clothing, dresses skirts, shirts and blouses. <i>"Intensive Rinse" is not possible in this programme.</i>	1,5	*	Yes	—	*	—	—	*	*	—	500
Wool	 40°, 30°, 20°		Only machine washable woollens with pure new wool label.	1,0	*	Yes	—	*	—	—	—	*	—	800
Hand wash			Textiles made of linen, silk, wool and viscose marked as "handwashable".	2,0	*	Yes	—	*	—	—	—	*	—	800
Cold wash		—	Averagely to lightly soiled cottons, bed linen, table linen, underwear, towels, shirts, etc. <i>For heavily soiled loads the "Prewash" option can also be selected. A spin cycle is carried out at the end of this programme.</i>	5,0	*	Yes	—	*	—	*	*	*	—	1000
Rinse		—	<i>To rinse and refresh laundry.</i>	5,0	*	—	—	*	—	—	—	*	—	1000
Drain/Spin		—	<i>Drain and spin.</i>	—	—	—	—	*	—	—	*	*	—	1000

* Programmes in conformity with IEC/EN 60456.



Whirlpool

Home Appliances



What to do if...

...The appliance will not start, the Start button is not blinking:

Check whether:



- The appliance is plugged in.
- The wall socket is functioning correctly (use a table lamp or similar).

...The appliance will not start, but the Start button is blinking:

Check whether:



- The appliance door is properly closed.
- A programme has been selected.
- The water tap is open. If not, open the tap and press the Start button.

...No water supply:

Check whether:



- The tap is turned on completely.
- Kinks are present in water hose.
- The water hose filter is clogged.
- The water hose is frozen up.

...Waste water not pumped out:

Check whether:



- The drain hose is correctly installed (see "Installation Instructions" in the Instructions Manual).
- The filter is clogged.
- The drain hose is frozen up.

...Detergent and additive product residues in detergent drawer at end of wash:

Check whether:



- The siphon is correctly installed and clean (see "Care and Maintenance" in the Instructions Manual).
- Enough water is being supplied. The mesh filters between the inlet hose and the tap could be clogged (see "Care and Maintenance" in the Instructions manual); check and clean the filter two or three times a year (see "Removing the filter" in the Instructions Manual).

Note:

Too much detergent can result in excess foam formation, which reduces washing efficiency. If the appliance detects excessive foam it may prevent spinning. Insufficient detergent may result in grey laundry, deposits on the drum, tub and heater. To prevent dispensing problems when using highly concentrated powder and liquid detergents, use the special detergent ball or bag supplied with the detergent and place it inside the drum. Whitish residues on dark fabrics are caused by insoluble compounds used in modern phosphate-free powder detergents. If this occurs, shake or brush out the fabric or use liquid detergents.

Keep detergents and additives in a dry place and out of reach of children. Use only detergents and additives specifically produced for domestic washing machines. If you use descaling agents, dyes or bleaches, make sure they are suitable for washing machine use. Descaler could contain components that can attack parts of your washing machine.

Do not use any solvents (e.g. turpentine, benzene, etc.). Do not machine wash fabrics that have been treated with solvents or flammable liquids.

...Machine vibrates during spin cycle:

Check whether:



- The machine is perfectly horizontal with all four feet on ground (see "Installation" in the Instructions Manual).
- The transit bolts have been removed. The transit bolts must be removed before the appliance can be used (see "Installation" in the Instructions manual).

...Final spin results are poor:

Check whether:



- The appliance has an imbalance detection and correction system. If individual heavy articles are loaded (bathmat, bathrobe, etc.) this system may reduce the spin speed automatically to protect the appliance or even interrupt the spin cycle altogether, if the imbalance is too great even after several spin starts.
- If the laundry is still too wet at the end of the cycle, add smaller articles of laundry and repeat the spin cycle.
 - Excessive foam formation may also prevent spinning. Ensure correct amount of detergent is used.

AFTER SALES SERVICE

If, after carrying out the above checks, the malfunction persists or appears again, turn the appliance off and call our After-Sales Service (see guarantee).

Specify:

- The nature of the problem
- The type and model of washing machine
- **The service code (the number after the word Service). The After-Sales Service sticker is on the right side of the open door.**

SERVICE 0000 000 00000





Please read the Instructions Manual carefully before using your new washing machine

GB

Quick Reference Guide



Programme selector

To select a programme, turn the knob.
The corresponding symbol will appear on the display.
To change the programme once the wash cycle has started, turn the knob to "○" and set the new programme.
When the knob is on "○" three dashes blink on the display.

Départ
Annulation
programme



Start button

When you press this button, it lights up and the wash cycle starts. At the end of the wash cycle the light will turn off and END will appear on the display.

Marche
Arrêt



On/Off button

This button switches the washing machine on/off.

Changing or interrupting the programme during the wash cycle

Turn the programme selector to the "○" position.
Select the new programme (with temperature), any options and another spin speed if you want.
Press the "Start" button again. If the "On/Off" button is pressed, no detergent has to be added.

Cancelling a programme before the end

Turn the programme selector to the "○" position.
Set the programme selector to programme setting "Drain/Spin".
Press the "Start" button to start the "Drain/Spin" cycle.

Display

Shows the wash cycle sequence.



Options

Selecting any option the indication lights up.
When the combination of programme, additional options and temperature is not possible, the indication lights switch off automatically.
Unsuitable combinations of options are deselected automatically.

Start Delay

Delays the start of the wash cycle by 1 to 16 hours. Each time the button is pressed, the start of the wash cycle is delayed by 1 hour.

Prewash

Only for heavily soiled laundry (e.g. sand, granular dirt). Programmes with Prewash last approx. 15 minutes longer.

Intensive rinse button

More water and a longer time in rinse cycle is added.
The intensive rinse function is especially suitable for areas with particularly soft water, for baby clothes and to help people with allergies.

Rinse Hold

The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.
This option is particularly recommended for the programme "Synthetics" or "Delicate".

This function is particularly useful if you want to postpone spinning to a later time or when you do not wish to spin the clothes.

To terminate the "Rinse Hold" option (in synthetic and wool programmes only)

Press the "Rinse hold" button again; the load will be spun according to the selected programme.

If you do not wish to spin the clothes, turn the programme selector knob to the drain programme, after pressing the "No Spin" button.

Spin

Every programme has an automatic predefined maximum spin speed.
Press the button to select a different spin speed.
If the spin speed "0" is selected, the final spin is cancelled. The water is drained out only.

Quick wash

For quick, economical washes. Especially suitable for small, lightly soiled loads. This option can be used with Cotton and Synthetic programmes. Selecting this function allows you to shorten the wash cycle time depending on the temperature.

Note: reduce the detergent quantity.

Power and water consumption data

Programme	Temperature Selector (°C)	Load (kg)	Water (l)	Energy (kWh)	Programme Duration approx. (hours : minutes)*	Prewash cycle increases programme duration by approx. 15 minutes. Consumption values were measured in normalized conditions in compliance with Standard IEC/EN 60 456. Consumption data in the home may vary with respect to the values given in the table in relation to the water supply pressure and temperature, the load and the type of wash. * The remaining time display may differ from the values given in the table since it depends on the conditions of use in the home. ** To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.
Cotton	90	5.0	49**	1.20	1:56	
Cotton	60	5.0	49	0.95	2:13	
Cotton	40	5.0	49	0.45	2:00	
Synthetics	60	2.5	42	0.80	1:44	
Synthetics	40	2.5	42	0.43	1:34	
Synthetics short	30	2.0	30	0.30	0:40	
Delicate	30	1.5	47	0.45	0:53	
Wool	40	1.0	58	0.45	0:48	
Handwash	30	2.0	55	0.25	0:51	

Whirlpool is a registered trademark of Whirlpool USA

5019 301 20104

(We reserve the right to make technical modifications)

CONTENTS

BEFORE USING THE WASHER-DRYER

FIRST WASH CYCLE

PRECAUTIONS AND GENERAL RECOMMENDATIONS

DESCRIPTION OF THE WASHER-DRYER

CHILD SAFETY DEVICE

PREPARING LAUNDRY

DETERGENT AND ADDITIVES

WASHING PROGRAMME

REMOVING THE FILTER

DRAINING RESIDUAL WATER

CARE AND MAINTENANCE

TROUBLESHOOTING GUIDE

AFTER-SALES SERVICE

MOVING AND TRANSPORTING THE APPLIANCE

INSTALLATION



BEFORE USING THE WASHER-DRYER

1. Removing the packaging and inspection

- After unpacking, make sure that the washer-dryer is undamaged. If in doubt do not use the washer-dryer. Contact After-Sales Service or your local retailer.
- Keep the packaging material (plastic bags, polystyrene parts, etc.) out of the reach of children, as they are potentially dangerous.

2. Removing the transit bolts

- The washer-dryer is fitted with transit bolts to prevent internal damage during transport.
Before using the washer-dryer you must remove the transit bolts (see "Installation/Removal of the transit bolts").

3. Installation of the washer-dryer

- Move the washer-dryer without carrying it by the worktop.
- Install the washer-dryer on a solid and level floor surface, preferably in a corner of the room.
- Make sure that all four feet are stable and resting on the floor and then check that the washer-dryer is perfectly level using a spirit level (see "Installation/Adjusting the feet").

4. Water supply

- Connect the water supply inlet hose in accordance with the regulations of your local water company (see "Installation/Connecting the water inlet hose").
- Supply: Cold water only
- Tap: 3/4" threaded hose connector
- Water pressure: 0.05-1.00 MPa (0.5-10 bar).

5. Drain

- Connect the drain hose to the siphon or hook it over the edge of a sink with the "U" bend (see "Installation/Connecting the water drain hose").
- If the washer-dryer is connected to a built-in drainage system, ensure the latter is equipped with a vent to avoid simultaneous loading and draining of water in the washer-dryer (siphoning effect).

6. Electrical Connection


- Electrical connections must be carried out by a qualified technician in compliance with the manufacturer's instructions and current standard safety regulations.
- Voltage information, power consumption and electrical protection data are supplied on the inside of the filter cover.
- The appliance must be connected to the mains by means of a socket with an earth connection in accordance with current regulations. Regulations require that the appliance is earthed.
The manufacturer declines all liability for injury to persons or pets, or damage to property directly or indirectly due to failure to observe the directions.
- Do not use extension leads or multiple sockets.
- Before any maintenance work on the appliance disconnect it from the mains supply.
- After installation, access to the mains plug or disconnection from the mains supply must be ensured at all times via a double-pole switch.
- Do not operate the washer-dryer if it has been damaged during transport. Inform After-Sales Service.
- Mains cables replacement is only to be carried out by After-Sales Service.
- The washer-dryer may be used in the household exclusively for the uses prescribed.

Minimum housing dimensions:

Width	595 mm
Height:	850 mm
Depth:	530 mm


FIRST WASH CYCLE

This initial cycle without laundry serves to eliminate any water remaining after your appliance was tested at the factory.

1. Open the water tap.
2. Close the door.
3. Pour a small amount of detergent (about 30 ml) into the detergent dispenser .
4. Select a short programme (see programme chart).
5. Press the "On/Off" button.

PRECAUTIONS AND GENERAL RECOMMENDATIONS

1. Packing

- The packaging material is recyclable as indicated by the recycling symbol . Adhere to local regulations when disposing of packing material.

2. Energy saving tips

- To obtain the best use of energy, water, detergent and time, use the recommended maximum load size for the selected programme.
- Do not exceed manufacturers' recommended dosages as shown on the detergent package.
- Use "Prewash" for heavily soiled laundry only! Save detergent, time, water and energy consumption by not selecting "Prewash" for slight to normally soiled laundry. You save on water, energy and time as a result.
- Pretreat stains with stain remover or soak dried in stains in water before washing in the washer-dryer, this reduces the necessity of a hot water programme.
- Save energy by using a 60° C instead of a 90° C wash programme or a 40° C instead of a 60° C wash programme.
- Save energy and time by selecting a high spin speed to reduce the water content in laundry before using the dryer (for machines with adjustable spin speed).

3. Disposing of packing and old appliances

- The washer-dryer is manufactured from recyclable materials. Dispose of the appliance in conformity with local waste disposal regulations.
- Before scrapping, cut off the power cable so that it cannot be connected to the mains.
- Remove detergent from the dispenser if you intend to scrap your washer-dryer.

4. Child safety

- Children must not be allowed to play with the washer-dryer.

5. General recommendations

- When the washer-dryer is not in use unplug it and turn off the water tap.
- Prior to cleaning and maintenance switch off the washer-dryer and disconnect it from the mains.
- To clean the outside of the washer-dryer, use a neutral detergent and a damp cloth.
- Do not use abrasive detergents.
- Do not attempt to force the door open.
- If necessary, the power cable may be replaced with an identical one obtained from our After-Sales Service. The power cable must only be replaced by a qualified technician.


6. EC Declaration of conformity CE

- This washer-dryer has been designed, constructed and distributed in compliance with the safety regulations of EC Directives:
73/23/EEC Low Voltage Directive
89/336/EEC Electromagnetic Compatibility Directive
93/68/EC CE Marking Directive.



DESCRIPTION OF THE WASHER-DRYER

1. Worktop
2. Control panel
3. Detergent dispenser
4. Door
5. Door handle
 - To open the door press the button inside the handle and pull
 - Close the door by pressing it firmly (the lock will click into place)
6. Filter (behind cover)
7. After-Sales Service sticker (inside door)
8. Adjustable feet
9. Technical specifications sticker (inside cover)

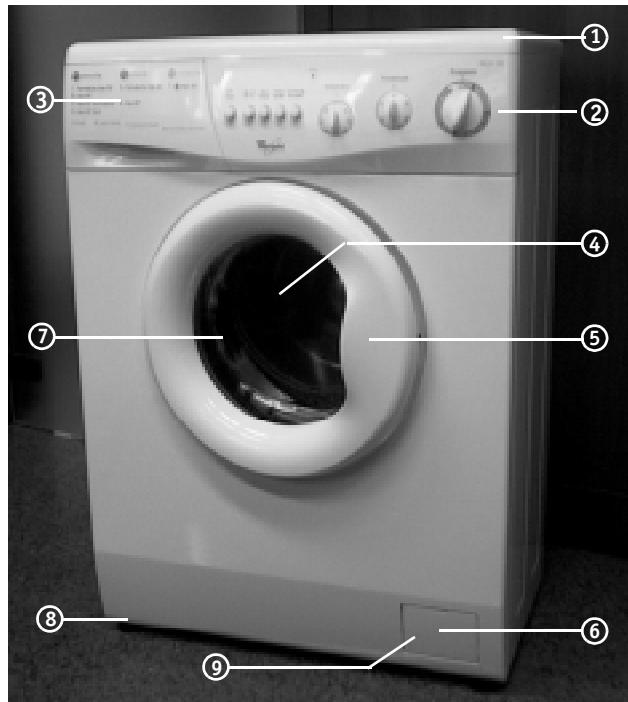

CHILD SAFETY DEVICE

An electrical device prevents the door from opening while the appliance is in operation. When the wash cycle ends, wait 2 minutes for the door to unlock.

PREPARING LAUNDRY

Sorting the laundry

1. Sort laundry as follows

- **Type of fabric/care label symbol**

Cotton, mixed fibres, synthetics, wool, handwash items.


- **Colour**

Separate whites from coloured items. Wash new coloured items separately.

- **Size**

Wash items of different sizes in the same load to improve washing efficiency and distribution in the drum.

- **Delicate items**

Wash delicates separately: use a special programme for Pure New Wool , curtains and other delicates. Remove curtain hooks or wash curtains with hooks inside a cloth bag. Use the special program for handwash fabrics. Wash small articles (e.g. nylon stockings, belts etc.) and items with hooks (e.g. bras) in a special wash bag or in a zipped-up pillow case.



2. Empty pockets

Coins, safety pins and similar items can damage your laundry and the appliance drum and tub.

3. Fasteners

Close zips and fasten buttons or hooks; loose belts or ribbons should be tied together.

Stain removal

- Blood, milk, egg etc. are generally removed by the automatic enzyme phase of the programme.
- To remove red wine, coffee, tea, grass and fruit stains etc. add a stain removing agent to the detergent dispenser  or chlorine bleach in compartment  (depending on model).
- Heavily soiled parts can be treated with a stain remover if necessary.

Dyeing and Bleaching

Commercially available products usually consist of a dye colour, fixing agent and salt. Pour the dye colour, the fixing agent and then the salt directly into the empty drum. Load the laundry only afterwards.

- Only use products designed for use in washing machines.
- Follow manufacturer's instructions.
- Rubber and plastic parts in the washer-dryer can be stained by dyes.

Loading the laundry

1. Open the door.
2. Load the articles one at a time loosely into the drum, without overfilling. Follow loads recommended in the programme chart: overloading will result in unsatisfactory washing results and creased laundry.
3. Close the door.

DETERGENT AND ADDITIVES

Choice of detergent and additives

The type of detergent depends on:

- the type of fabric (cottons, easy care/synthetic, delicate items, wool).

Note: use only specific detergents for washing wool.

- colour;
- wash temperature;
- degree and type of soiling.

Notes:

Whitish residues on dark fabrics are due to the insoluble water softeners in modern phosphate-free detergents.

If you notice this problem, shake or brush the affected items, or use a liquid detergent.

Keep detergents and additives in a safe, dry place out of the reach of children.

Use only detergents and additives specifically produced for domestic washing machines.

If you use descaling agents or dyes make sure they are suitable for washing machine use. Descalers could contain products which could damage your washer-dryer.

Do not use solvents (e.g. trichloroethylene, benzene, etc).

Do not wash fabrics which have been treated with solvents or flammable liquids in the washer-dryer.

Dosage

Follow the instructions on the detergent pack in relation to:

- the degree and type of soiling;
- the size of the load;
- full load: follow the detergent manufacturer's instructions;
- half load: 3/4 the amount used for a full load;
- minimum load (about 1 kg): 1/2 the amount used for full load;




- water hardness in your area (ask for information from your water company): soft water requires less detergent than hard water.

Notes:

Too much detergent can result in excessive foam. This reduces washing efficiency. If the washer-dryer detects too much foam, it may prevent spinning.

Using insufficient detergent results in grey laundry and increased scale deposits on the heating element and drum.

You can use liquid detergent in the "Prewash" phase for programmes with this option. In this case only use powder detergents for the main wash .

When using concentrated fabric softeners, add water in the detergent dispenser up to the "MAX" level mark.

To prevent dispensing problems when using highly concentrated powder and liquid detergents, use the special detergent ball supplied with the detergent and place it inside the drum.








Water hardness: soft water requires less detergent

WATER HARDNESS CATEGORY	CHARACTERISTICS	GERMAN °dH	FRENCH °fH	ENGLISH °eH
1	soft	0-7	0-12	0-9
2	average	7-14	12-25	9-17
3	hard	14-21	25-37	17-26
4	very hard	over 21	over 37	over 26


Filling the detergent and additives

1. Pull the detergent dispenser out fully. The dispenser has three chambers.

2. Add the detergent:

- Programmes with pre- and main wash  
- Main wash programme without prewash 
- Fabric softeners, conditioners and chlorine bleach: no more than to "MAX" mark 
- Stain remover 
- Water softener (water hardness class 4) 
- Starch (dissolved in water) 

3. Close the detergent dispenser completely.

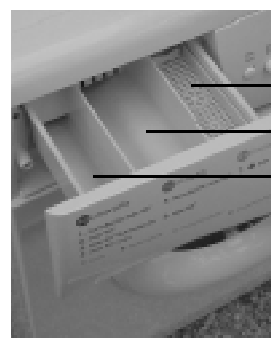

WASHING PROGRAMME

Selecting the programme:

1. Check that the **programme selector** is on "Stop".
 2. Plug in the appliance.
 3. Open the water tap.
 4. Set the **programme selector** to the desired programme.
 5. Depending on the model, set the **thermostat** knob to the desired temperature.
 6. Depending on the model, set the **spin speed selector** to the desired spin speed.
 7. Select the **options** desired by pressing the corresponding buttons.
By a further press of the button **this option** can be turned off again.
 8. Check that the door is well closed. Press the "On/Off" button.
The indicator lamp lights up.
- Attention:** the programme selector knob only moves clockwise, do not force it in the opposite direction.

Door lock

The door locks automatically after the programme start until the end of the programme.
If the programme selector is moved to the "Stop" position or if the electricity supply is interrupted, the door is released after approximately two minutes.
In this case do not open the door because hot water could come out of the door.

Programme end

The programme selector knob is at the "Stop" position.

1. Press the "On/Off" button. The indicator light turns off.
 2. Cancel the special options by pressing the appropriate buttons.
 3. Turn off the tap.
 4. Wait approximately 2 minutes for the door to unlock.
 5. Open the door and unload the machine.
- N.B.** After unloading, do not fully close the door but leave it ajar to allow the drum to dry.

Changing programme

1. Press the "On/Off" button. The indicator light turns off.
 2. Select the new programme.
 3. Press the "On/Off" button. The new programme will re-start.
- Do not add detergent for this programme.

Programme interruption or pause

To interrupt the running programme for a certain period of time and continue it at a later time:

1. Press the "On/Off" button.
2. Following the desired pause press the "On/Off" button again.

REMOVING THE FILTER

1. Stop the washer-dryer and unplug it.
2. Open the filter cover.
3. Place a bowl beneath the filter.
4. Slowly turn the filter anticlockwise without extracting it as yet.
5. Wait until all the water has drained into the bowl.
6. Now unscrew the filter completely and remove it.
7. Remove any foreign bodies from the filter.
8. Insert the filter and screw it in clockwise until it locks, making sure it is hermetically closed.
9. Close the cover.
10. Pour 0.5 l of water into the detergent dispenser to reactivate the "Eco System".
11. Plug in the appliance once again.
12. Select a programme and start it.

Check the filter two or three times a year and clean it if necessary.

- If the washer-dryer is not draining correctly or fails to perform spin cycles.

IMPORTANT: Make sure the water has cooled before draining the appliance.



DRAINING RESIDUAL WATER

- To drain the residual water from the pump, tilt the washer-dryer forwards and proceed as per points 8 and 10 of the previous chapter.

When should I drain residual water?

- Before transporting (moving) the washer-dryer.
- If the washer-dryer is installed in a room subject to sub-zero temperatures.
In this case the machine should be drained after each wash.

CARE AND MAINTENANCE

Appliance exterior and control panel

- Clean using normal household cleaner (do not use abrasive products or solvents).
- Dry with a soft cloth.

Door seal


- Clean with a damp cloth as necessary.
- Periodically check the seal folds for foreign bodies.

Filter

- Check and clean the filter at least two or three times a year (see "Removing the filter").

Detergent dispenser

1. Pull the detergent dispenser out fully.
2. Remove all the parts and wash them under running water and reposition them.
3. Wipe any residual detergent from the dispenser.
4. Carefully replace the detergent dispenser by inserting in the left guide and pushing it in.

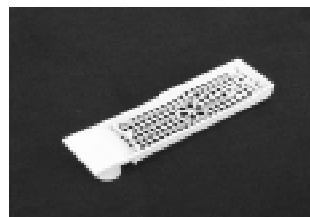

Water hose mesh strainer

Check and clean periodically.

For machines with a straight water supply hose

1. Turn off the tap.
2. Unscrew the hose from the tap.
3. Remove the mesh filter and clean it.
4. Screw the hose back onto the tap.
5. Unscrew the hose from the washer-dryer.
6. Remove the filter from the washer-dryer with pliers and clean it.
7. Refit the filter and screw the hose connection to the washer-dryer.
8. Turn on the tap and **make sure the connections are completely water-tight.**



TROUBLESHOOTING GUIDE

The washer-dryer will not start, the indicator light does not light up.

Check whether:

- the appliance is plugged in;
- the wall socket is functioning correctly (use a table lamp or similar);
- "On/Off" button pressed.


The washer-dryer will not start but the indicator light is on.

Check whether:

- the door is properly closed;
- a programme has been selected and the programme is started;
- the water tap is turned on. If not, turn on the tap and switch the washer-dryer off and then on again.

The washer-dryer stops during the programme.

Check whether:

- the "Rinse and Hold" button is pressed; terminate this option by pressing the button again;
- the "On/Off"  indicator light is flashing. Press the "On/Off" button.

Insufficient or no water supply.

Check whether:

- the water tap is turned on completely;
- kinks are present in the water hose;
- the water hose filter is clogged;
- the water in the supply hose is frozen.

Waste water not pumped out.

Check whether:

- the drain hose is correctly installed (see "Installation");
- the filter is clogged;
- the water in the drain hose is frozen;
- the "Rinse and Hold" button is pressed.

Detergents and additive produce residues in the detergent drawer at end of wash.

Check whether:

- the siphon device is correctly installed and clean (see "Care and maintenance");
- enough water is being supplied. the mesh filters between the inlet hose and the tap could be clogged (see "Care and maintenance"); Check and clean the filter at least two or three times a year (see "Removing the filter").

Also see "Detergent and additives".

The washer-dryer vibrates during the spin cycle.

Check whether:

- the washer-dryer is perfectly horizontal and all four feet adjusted (see "Installation");
- the transit bolts have been removed. The transit bolts must be removed before the washer-dryer can be used (see "Installation").

Final spin results are poor:

The washer-dryer has an imbalance detection and correction system. If individual heavy articles are loaded (bathmat, bathrobe) this system may reduce the spin speed automatically or even interrupt the spin cycle, if the imbalance is too great even after several spin starts.

- If the laundry is still too wet at the end of the cycle, add smaller articles of laundry and repeat the spin cycle.
- Excessive foam formation may also prevent spinning. Ensure correct amount of detergent is used

Important: wait one hour and if the fault persists, contact After-Sales Service, quoting the error number displayed (see "After-Sales Service").

AFTER-SALES SERVICE

Before contacting After-Sales Service:

1. Try to remedy the problem yourself (see "Troubleshooting guide").
2. Restart the programme to check whether the problem has solved itself.
3. If the malfunction persists, call After-Sales Service,

Specify:

- The nature of the fault.
- The exact model of the washer-dryer.
- The service code (number after the word SERVICE).

SERVICE 0000 000 00000



The After-Sales Service sticker is on the inside of the door.

- Your full address.
 - Your telephone number and area code.
- After-Sales Service phone numbers and addresses are given on the guarantee card. Alternatively, consult the dealer from whom you purchased the appliance.

MOVING AND TRANSPORTING THE APPLIANCE

Never move the washer-dryer by carrying it by the worktop.

1. Unplug the appliance.
2. Turn off the tap.
3. Disconnect the inlet and drain hoses.
4. Eliminate all water from the hoses and from the washer-dryer (see "Removing the filter", "Draining residual water").
5. Fit the transit bolts (obligatory) (see "Installation").

INSTALLATION

Removing the transit bolts




1. Slacken and remove the screws "A" which lock the drum during transport by following the instructions given at the side.
2. Insert a screwdriver into the empty holes and tilt to remove the plastic spacers "C" (transit bolts) and retrieve them.

3. Keep the transit bolts for future use.

If the spacers remain inside the machine: open the rear panel by removing the screws "B" remove the spacers and replace the panel.

Fit the transit bolts before transporting the appliance as follows:

1. Disconnect the plug, remove the inlet and drain hoses.
2. Unscrew fixing screws "B" on the rear panel and remove it.
3. Insert the four screws "A" of the safety catch in the four rubber bushes, then put the four spacers "C" on the screws behind the panel.
4. Position the rear panel on the appliance, first tighten the four screws "A" of the safety catch for transportation to the rear part of the tub, then use screws "B" to fit the panel to the appliance.

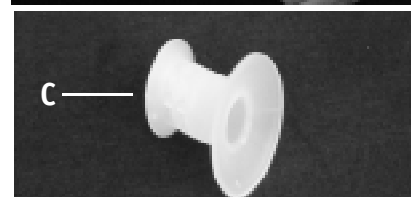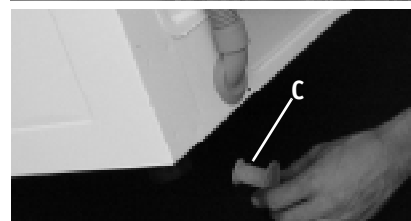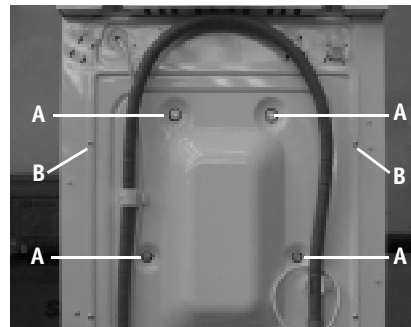

Adjust the feet

Slight unevenness of the floor may be compensated by turning the four washer-dryer feet in or out (do not insert wooden shims, cardboard or similar materials under the feet):

1. Slacken the lock nut using the spanner supplied.
2. Adjust the height of the foot, turning it by hand.
3. Tighten the lock nut anticlockwise towards the washer-dryer.

If the washer-dryer is to be installed on a wooden floor, distribute the weight by placing it on a 60 x 60 (or 40) cm sheet of plywood at least 3 cm in thickness. Secure the plywood sheet to the floor.

Connecting the water inlet hose For models with straight hose

1. Insert the mesh strainer (included in the accessories) into the threaded tap coupling and the coupling between the hose and the washer-dryer.
2. Connect the inlet hose carefully, preferably by hand, to the tap.
3. Make sure there are no kinks in the hose.
4. Connect the inlet hose carefully, preferably by hand, to the washer-dryer.
5. Turn the tap on fully and check that the joints at the appliance and the tap are watertight.

If the hose is too short, replace it with a suitable length of pressure resistant hose (1000 kPa min, EN 50084 approved type).

Check the hose regularly for brittleness and cracks and replace if necessary.

The washer-dryer can be connected without a non-return valve.

Connecting the water drain hose

1. Unhook the drain hose from the right clip.
Attention: do not unhook the left drain hose connection.
2. Connect the drain hose to the siphon or hook it over the edge of a sink by means of the "U" bend supplied.
3. Make sure there are no kinks in the hose.
4. Secure the hose so that it cannot fall down while the washer-dryer is running.

Small hand basins are not suitable.

If the hose is to be inserted directly into the drain pipeline, the inside diameter of the pipe must be appropriate in relation to the diameter of the drain hose.

If you need to add an extension, use a flexible hose of the same type. Secure the connections with suitable hose clamps.

Max. drain hose length: 2.50 m

Max. drain height: 90 cm

Min. drain height: 60 cm

